

FDB-0208B Splitter Distribution Box

1. Description:

Widely used in FTTH access network, telecommunication networks, CATV networks, data communications network, local area networks, indoor and outdoor application.

2. Features:

- Industry standard user interface, made of high impact plastic
- Light ,easily open and maintenance
- Anti-UV, ultra violet resistant and rainfall resistant
- Splice inside, book-form structure for distribution function
- 1:4 or 1:8 splitters installation
- 2 inlet ports,8 outlet ports for normal cables or drop cables
- On pole or wall mounted

3. Components:



4. Tools



cable pincers



sheath cutter



steel core cutter



tube cutter



stripper



cleaver




splicer




screw driver

5.Installation:


5.1 Open the cover by special key and screw off the middle plate

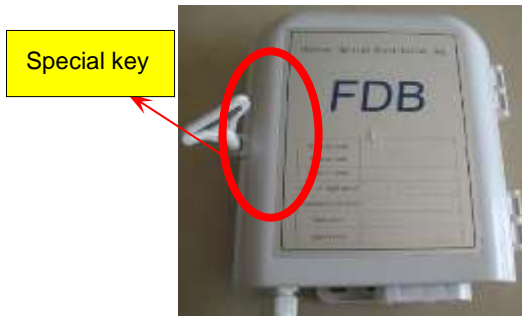


5.2 Take off the adapter panel, put it back after installing adapters

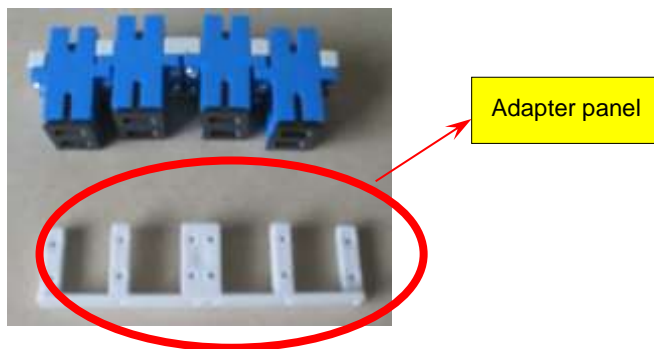


5.3. Fix PLC splitter,connect splitter ribbon fibers with output pigtails that coated loose tube, ix the arranged output pigtails with loose tube to tray, Lead output pigtail to the other side of the tray, and insert adaptor

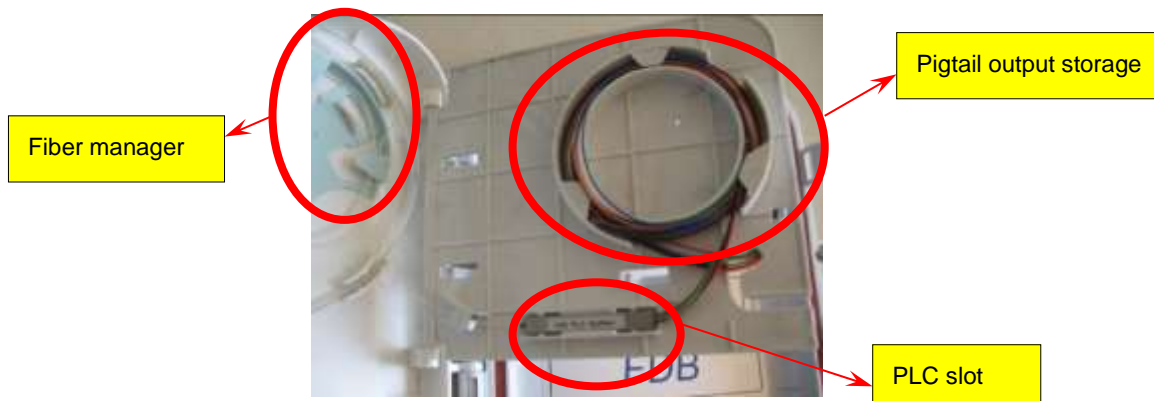



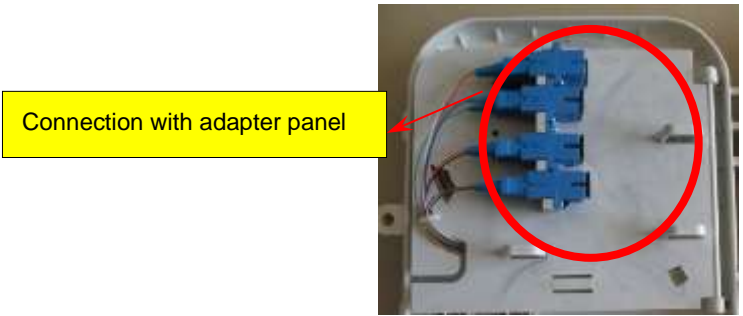


5.4 Remove the input entry holder and tension member, put stripped fiber through rubber ring and fix, then guide the fibers in sleeve to splice with input of splitter.

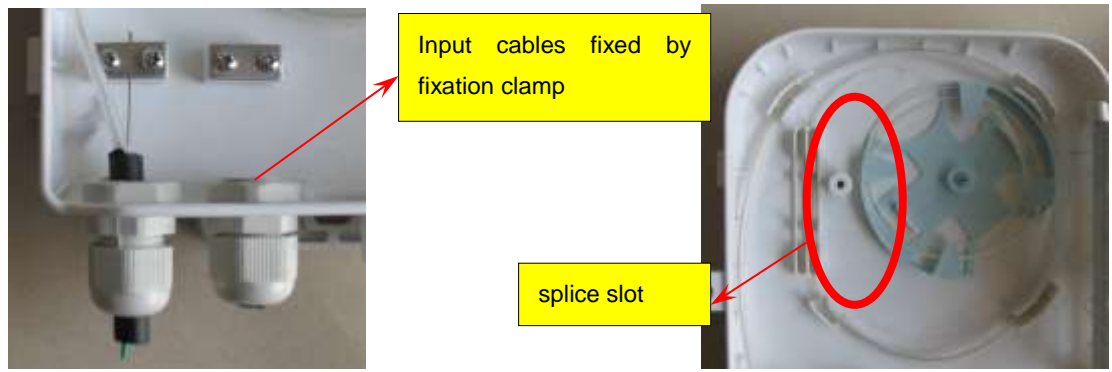

5.5 Fiber connection,coiling and storage,fixing,suitable for 2mm (or 3mm) pigtail and drop cable.

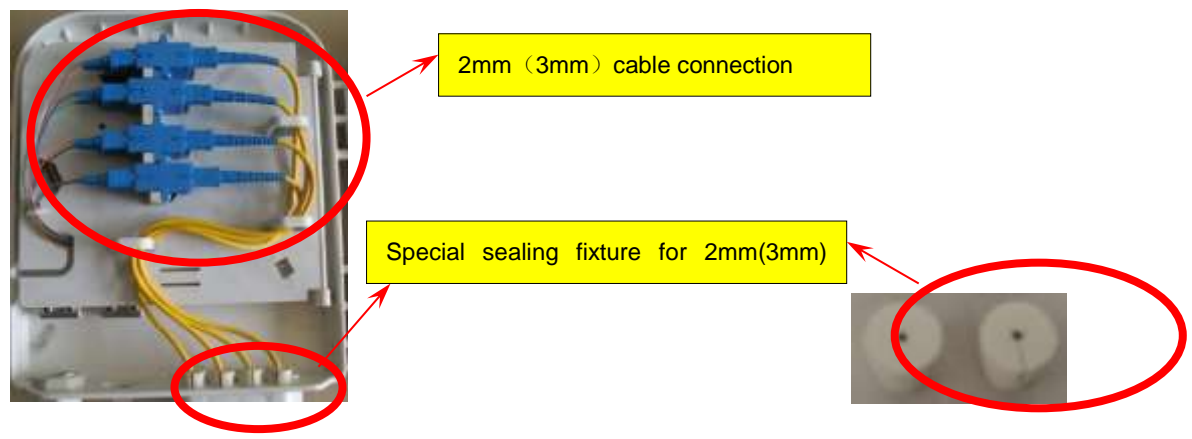


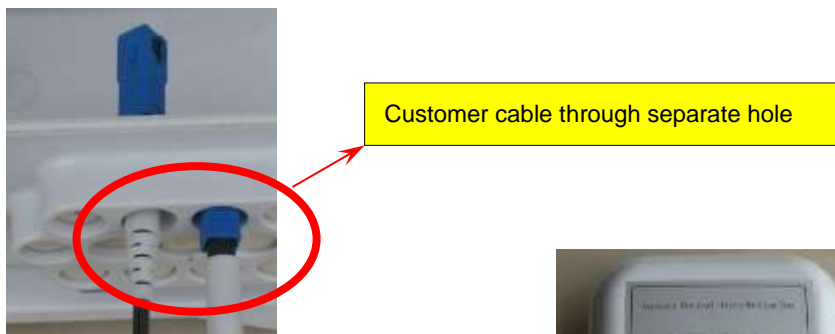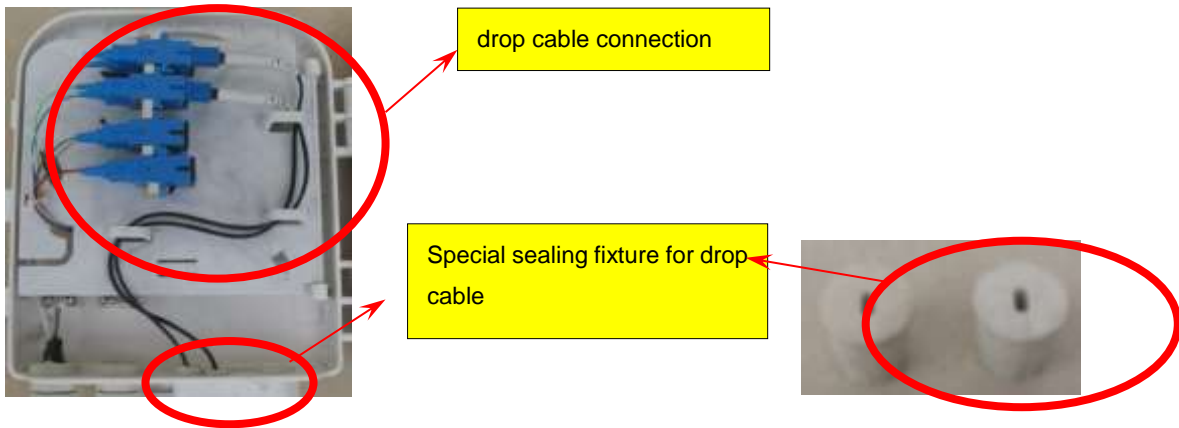


5.6 Check and lock the door



5.7 Installation: 1) pole mounted, make pole band pass through bracket's hole, fix the bracket to the pole by fastening pole band's bolts; 2) wall mounted, mark the target point on the bracket, fix the bracket to target point by nail or bolt.

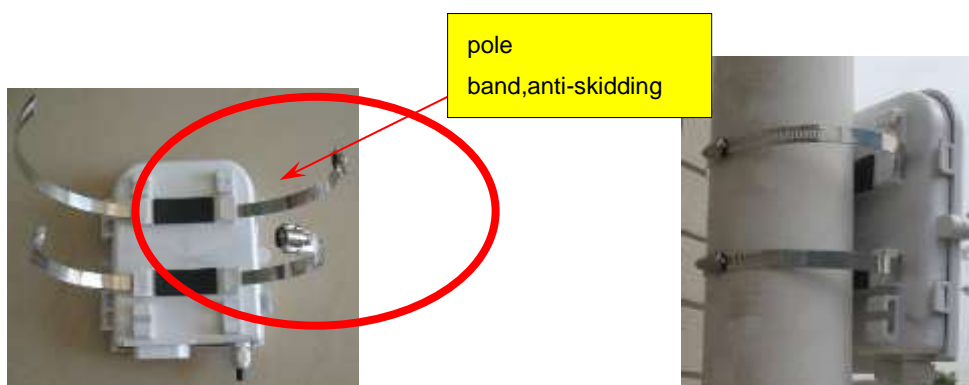

On pole

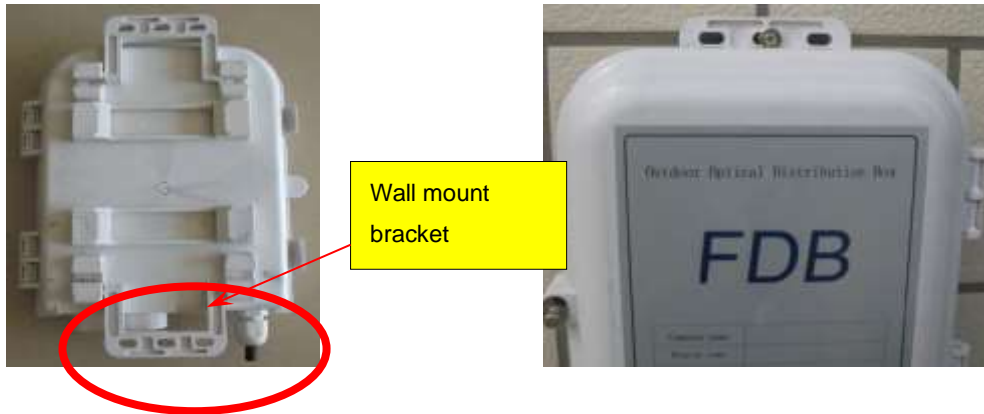

Wall mounted

6. Packing information:

Name	Type	Dimension(m m)	Net weight(kg)	Gross weight(kg)	Quantity in carton pcs
Splitter Distribution box FDB	FDB0208B	530*500*390	0.75	16.95	20